

LE CACHE PREMIUM WINE CABINETS

LEVELING INSTRUCTIONS

LEVELING INSTRUCTIONS

Make absolutely certain that your cabinet is level **before** loading any wine bottles to ensure that the cabinet is square and the doors seal properly. Your wine cabinet can be leveled by turning the leveling legs underneath the cabinet. You can raise (i.e. extend) the legs of the cabinet by turning the legs **CLOCKWISE** (assuming that you are looking down from the top of the cabinet.)

Level the CABINET

- Begin with all feet touching the floor, so that the cabinet does not wobble when the door(s) are closed.
- **If the cabinet is resting on carpet, place a carpet board under the cabinet so that all the leveling legs are on the same plane.**
- Side to Side – Place a level on the top of the **cabinet** (not the door) parallel to the door. Raise or lower either side of the cabinet by rotating the feet to center the level bubble. On larger cabinets with six leveling feet, use the four corner feet only for leveling purposes. After leveling, bring the two center feet to the floor for additional support.
- Front to Back – place a level on top of the cabinet (not the door) perpendicular to the door, and follow the same procedure.
- Double check the level again side to side.
- If cabinet is level, the lock should work freely without force. Also, the door(s) should be even (within 1/4 inch) with the top edge of the cabinet. Additionally, there should be no gaps between the rubber gasket on the door, and the face of the cabinet.

LE CACHE PREMIUM WINE CABINETS

LEVELING INSTRUCTIONS


DOOR ALIGNMENT INSTRUCTIONS

Proper door alignment is vitally important to create and maintain an airtight seal inside the cabinet. Additionally, air leaks caused by improper door alignment will compromise the environment inside the cabinet, and may create condensation along the door panels which eventually will lead to warping of the door. Follow the instructions below to properly adjust your door(s).

- If your cabinet has only one door, the plane of the top of the door should be parallel to the plane of the cabinet. If the non-hinge (i.e. left) corner of the door is higher than the cabinet, go to the **BACK RIGHT CORNER** of the cabinet and turn the leveling leg once **CLOCKWISE**, which will raise the right/back of the cabinet and lower corner of the front door. If the non-hinge corner is lower than the cabinet, go to the **BACK LEFT CORNER** of the cabinet and turn the leveling leg once **CLOCKWISE**, which will raise the left/back of the cabinet so that it is even with the corner of the front door. After adjusting the legs, open and shut the door, and check again to see if the door is aligned.

Aligned Doors:

Both Doors are on the Same Plane

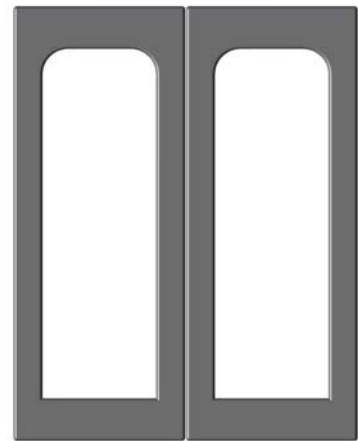

- If both doors are not on the same plane (i.e. one door is higher than the other), use the leveling legs to adjust the doors. Start with the door that is too high (in the illustration at right, the left door is too high), and go to the **BACK CORNER LEVELING LEG** on the **SAME SIDE** as the door that's too high (in the illustration at right, go to the back leg on the left side of the cabinet.) Turn the leveling leg once **CLOCKWISE**, which will raise the left/back of the cabinet and lower the front left door. After adjusting the legs, open and shut the doors. Repeat the process until the left door is level with the right door. It shouldn't take more than one or two clockwise turns to get both doors level.

Unaligned Doors:

Inside corner of Left Door is Too High

